

Canon MX (PG-37/40/50 - CL-38/41/51/52)

Once the cartridges are installed the printer will allow you to copy and print from a PC in its current default settings, but all faxes received will go straight to memory and will not be automatically printed. After adjusting these settings, all faxes will be received and automatically printed.

- Press MENU button until FAX SETTING menu appears.
- Select RX SETTING, press Ok.
- Auto Print RX: ON, press Ok.
- Print When No Ink: ON, press Ok.

Canon PG-37/40/50 – CL-38/41/51/52

There are 4 different methods to override the error messages. It will depend on your printer.

- Press and hold « stop/reset » for 5/6 seconds.
- Press and hold « ok » until the print starts again.
- Press and hold « resume » for 5/6 seconds.
- Press and hold “black” and “colour” simultaneously until the print starts again.



Cartridge World[®]

Why pay more to print?

 REFILL - NOT LANDFILL[®]